

**SAFETY NOTE:**  
Handle glass with care to avoid striking, scratching or slamming shut. NEVER clean the glass when it is hot. Keep children and pets a safe distance away.

Figure 33 - Glass Cleaning

**6. LOG REMOVAL/REPLACEMENT**

If removal of the logs becomes necessary, remove two screws from the front of the grate of a 30" or 33" appliance. If you have a 36" or 42" appliance, remove two screws from the front and one screw from the back right corner of the grate. Lift and pull the log set towards the front of the appliance, up and off the burner. See Figure 34.


To replace the logs, push and lower the log set onto the burner pan, making sure the back of the left most grate bar slides through the grate mounting bracket attached to the hearth pan. Replace the screws in the grate.



Figure 34 - Log Removal

The first name in fireplaces
 
## M. OPTIONAL COMPONENTS

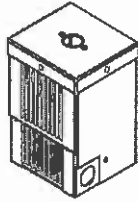


**BC10**  
Fan Motor Rheostat

**BC11**  
Automatic Variable Blower  
Control


**BC12**  
Variable Fan Speed  
w/Thermostat Control

 **BC14**  
Automatic Variable Blower  
Control

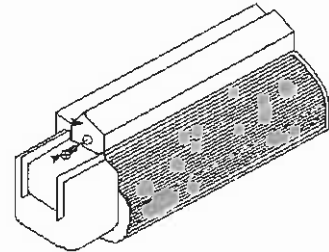

**GFK4**  
Fan Kit (33", 36" & 42" appliances only)

 **GFK21**  
Fan Kit (30" appliances only)

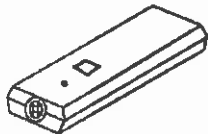

**RC-SMART-HTL**  
Remote Control

**RC-BATT-HTL**  
Battery-operated Remote Control

**RCT-MLT-HTL**  
Multi-Function  
Remote Control


**SMART-STAT-HTL**  
Remote Control with  
Thermostat Control

**SMART-BATT-HTL**  
Battery-operated Remote Control  
with Thermostat Control




**WSK-MLT-HTL**  
Multi-Function Wall Switch


## OPTIONAL COMPONENTS (con't)

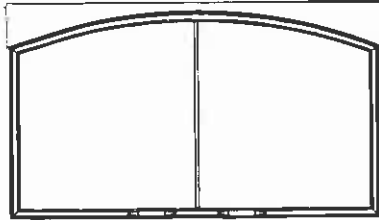 

 
DFA30/B/S, DFA33/B/S, DFA36/B/S, DFA42B/S  
Arched Glass Door

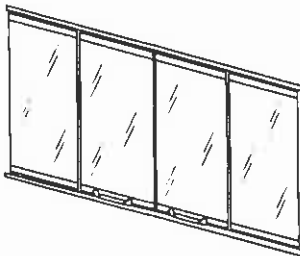

 
DFN0B/S, DFN3B/S, DFN6B/S, DFC2B/S  
Fixed Glass Door

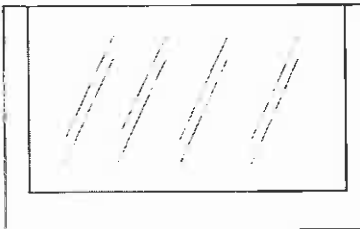

GP30 - Ceramic Glass - 30"  
GP33 - Ceramic Glass - 33"  
GP36 - Ceramic Glass - 36"

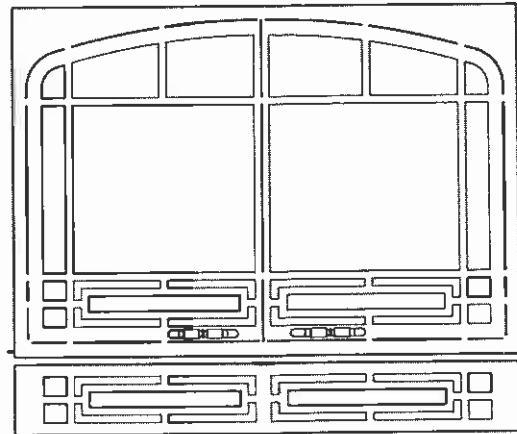 

 
FFAC30, FFAC33, FFAC36, FFAC42  
Front Face

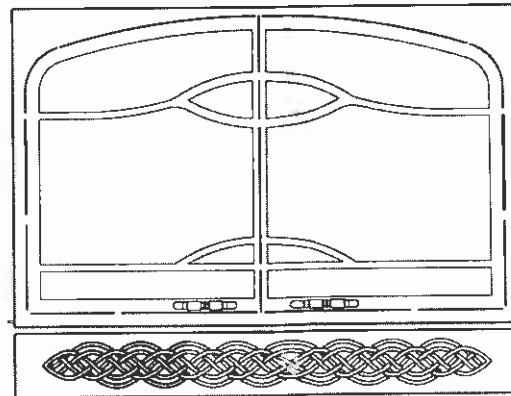


FFM30, FFM33, FFM36, FFM42  
Front Face

The first name in fireplaces

**OPTIONAL COMPONENTS (con't)**

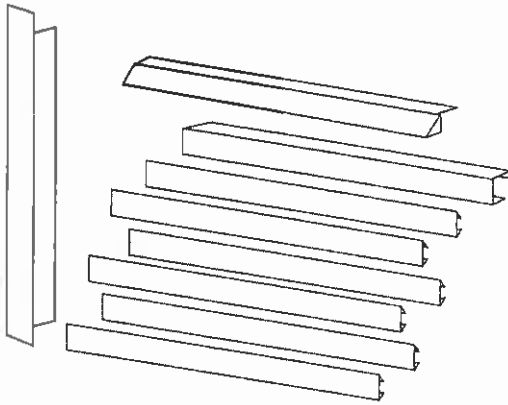 


TKN02S - 30"  
TKN32S - 33"  
TKN62B - 36"  
TKN22B/S - 42"  
Full-Face Trim Kits

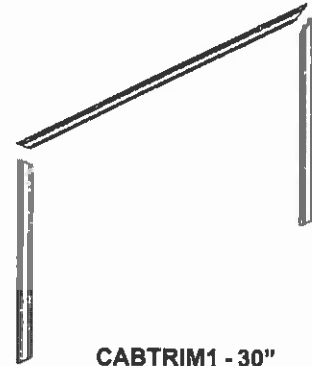 


CABTRIM1 - 30"  
CABTRIM2 - 33"  
CABTRIM3 - 36"  
Cabinet Trim



 TKN05B/S - 30"  
TKN35B/S - 33"  
TKN65B/S - 36"  
TKN25B/S - 42"  
Trim Kits

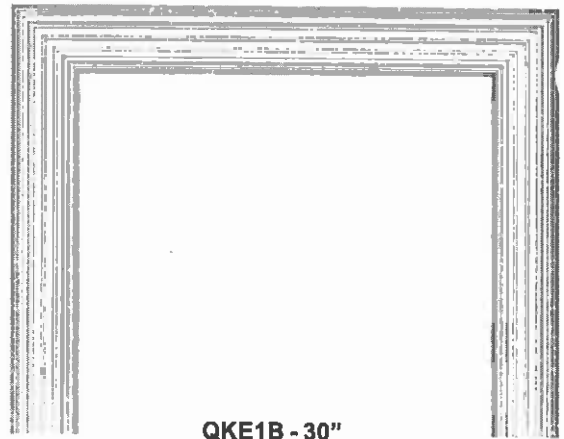

QKE1B - 30"  
QKE2B - 33"  
QKE3B - 36"  
Quick Tile Brass Surround

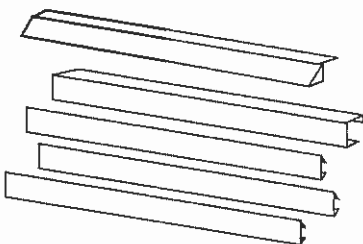 

TKN03B/S - 30"  
TKN33B/S - 33"  
TKN63B/S - 36"  
TKN23B/S - 42"  
Trim Kits

*The first name in fireplaces*

## OPTIONAL COMPONENTS (con't)

### ROBERTSHAW STANDING PILOT CONVERSION KITS

**CKVN**  
Conversion Kit  
(propane to natural gas)

**Includes:**  
Robertshaw Valve Regulator Replacement Kit  
Burner Orifices  
Pilot Orifice

**CKVP**  
Conversion Kit  
(natural gas to propane)

**Includes:**  
Robertshaw Valve Regulator Replacement Kit  
Burner Orifices  
Pilot Orifice

### DEXEN INTERMITTENT PILOT CONVERSION KITS

**DCKVN Propane to  
Natural Gas  
Conversion Kit  
(Intermittent Pilot)**

**Includes:**  
Dexen Valve  
Burner Orifices  
Plug Orifice (no hole)  
Pilot Orifice

 
**DCKVP Natural Gas  
to Propane  
Conversion Kit  
(Intermittent Pilot)**

**Includes:**  
Dexen Valve  
Burner Orifices  
Plug Orifice (no hole)  
Pilot Orifice

*The first name in fireplaces*

## N. REPLACEMENT PARTS


Replacement parts are available from your distributor/dealer.

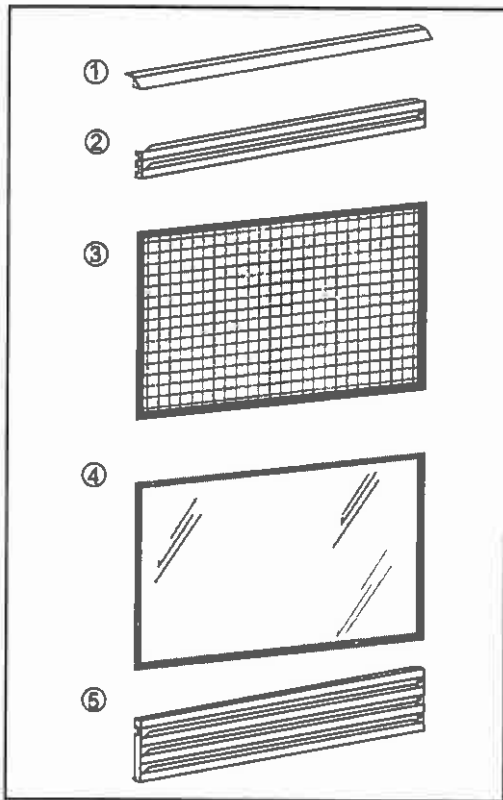

<b>1 Hood</b>		
4031-209	30"	
4031-210	33"	
4031-211	36"	
4031-212	42"	
<b>2 Upper Grille</b>		
4031-080	30"	
4031-081	33"	
4031-082	36"	
4031-083	42"	
<b>3 Screen Assembly</b>		
26802	30"	
26803	33"	
26805	36"	
4031-085	42"	
<b>4 Glass w/Frame</b>		
4031-068	30"	
4031-069	33"	
4031-070	36"	
4031-071	42"	
<b>5 Lower Grille</b>		
4031-076	30"	
4031-077	33"	
4031-078	36"	
4031-079	42"	
<b>6 Latch, Quick Access</b>		
33858		
<b>7 Log/Grate Assembly</b>		
4031-049	30"	
4031-050	33"	
4031-055	36"	
4031-056	42"	



 7

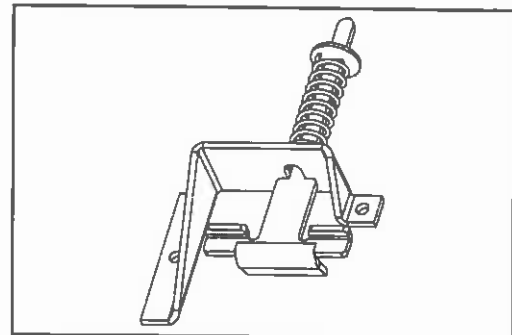

6 - Quick Access Latch

Visit our Website at [www.heatilator.com](http://www.heatilator.com) for a dealer/  
distributor near you!

The first name in fireplaces

# Index

## A

- Air Kit
  - Installation 11, 12
  - Operation 22
- Appliance Locations 7
- Appliance Preparation 16
  - Attaching the Hood 16
  - Lava Rock 17
  - Lot Set 16
  - Rock Wool 17
  - Upper Grille Panel Removal 16
  - Vermiculite 17

- Appliance Specifications 4

## B

- Blower Control 26

## C

- Certification 4
- Chase 10
- Cleaning
  - Burner & Control Compartments 23
- Cleaning the Glass 24
- Clearances 6, 7
- Codes 4
  - Electric 14, 15
  - Gas 4, 13
- Collar Shield 9
- Combustible Finishing Material 16
- Combustible Materials 7, 8
  - Version Kits 21, 29

- Dimensions 6

## E

- Elbows, using 9
- Electric Codes 14, 15
- Exposure to the Elements 1

## F

- Fan Kit 26
- Finishing Materials 16
  - Combustible 16
  - High Temperature Sealant 16
  - Mantel 16
  - Noncombustible 16
- Fire Glow 18
- Firestop Spacer 10
- Flame Patterns 23
- Framing 8
- Fuel 21
- Fuel Conversions 13, 21

## G

- Gas Codes 4, 13
- Gas Line Connection 13
- Gas Pressure 13
- Glass
  - Cleaning 24
  - Specifications/Certifications 4

## H

- High Altitude Installation 13
- High Temperature Sealant Material 16
- Hood 16
- Horizontal Installations 6

## I

- Ignition
  - Determining the Type 18
  - Intermittent Pilot 19
  - Standing Pilot 20

## Insulation

- Sagging or Loose 8
- Intermittent Pilot Ignition
  - Assembly 23
- Intermittent Pilot Ignition Wiring 15

## J

- Junction Box Installation 15

## L

- Lava Rock 17
- Lighting Instructions
  - Intermittent Pilot Ignition 19
  - Standing Pilot Ignition 20
- Locations 6, 7
- Log Removal/Replacement 25
- Lot Set 17

## M

- Maintenance 23
  - Burner & Control Compartment 23
  - Checking the Flame Patterns 23
- Mantel 8, 16

## N

- Nailing Flanges 8
- Nomenclature 5
- Noncombustible Finishing Material 16

## O

- Optional Accessories Requirements 15
- Optional Components 26
- Outside Air Kit
  - Installation 11, 12
  - Operation 22

## Q

- Quick Access Latch 30

## R

- Replacement Parts 30
- Rock Wool 17

## S

- Safety Glasses 2
- Seasonal Check List 21
  - Fuel 21
  - Intermittent Pilot Ignition Operation 21
  - Standing Pilot Operation 21
- Setting the Appliance 8
- Space Requirements 7
- Standing Pilot 14
  - Operation 21
- Standing Pilot Ignition Wiring Diagram 14

## T

- Termination Installation 10

## U

- Upper Grille 16
- Utilities 13
  - Fuel Conversion 13
  - Gas Line Connections 13
  - Gas Pressure 13
  - High Altitude Installation 13

## V

- Ventilation 11
- Venting
  - Check the System 11
- Venting System Inspection 24
- Vermiculite 17

## W

- Wall Switch 26
- Warranty 32
- Wiring 14
  - Diagram
    - Intermittent Pilot 15
    - Standing Pilot 14

The first name in fireplaces

# heatilator®

*The first name in fireplaces*

## Gas Appliance (Fireplace) Limited Lifetime Warranty

**HEARTH & HOME TECHNOLOGIES INC. ("HHT")** extends the following warranty for HEATILATOR® gas appliances installed in the United States of America or Canada (the "Appliance"). Dealers and employees of HHT have no authority to make any warranty or authorize any remedies in addition to or inconsistent with the terms of this warranty.

### Limited Lifetime Warranty

HHT warrants the Appliance for component failure due to a manufacturing defect of any of the following components: combustion chamber, burner pan, and logs. The Limited Lifetime Warranty specified above is subject to the conditions, exclusions and limitations listed below, is for the period the Appliance is owned by the original homeowner only, and is nontransferable.

### 1 Year Limited Warranty

HHT warrants the Appliance to be free from failure of any of the following components for a period of one year after installation: valve, flexible gas line connector, glass panel, fan, direct vent chimney components, factory paint, gasket, piezo ignitor, thermopile, thermocouple, junction box, pilot assembly, shutoff valve, high limit switch, refractory liners, transformer, and control box. If the Heatilator Appliance is found to be defective in either material or workmanship within one year of the date of original installation, HHT will provide replacement parts at no charge and pay reasonable labor and freight costs, and is for the period of one year following the date of original installation of the Appliance.

### Conditions, Exclusions, & Limitations of Liability

- A. Both the Limited Lifetime and 1 Year Limited Warranties supplied by HHT apply only while the Appliance is in its location of original installation. HHT's obligation under this warranty does not extend to damages resulting from (1) installation, operation or maintenance of the Appliance not in accordance with the Installation Instructions, Operating Instructions, and the Listing Agent Identification Label furnished with the Appliance; (2) installation which does not comply with local building codes; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) environmental conditions, inadequate ventilation or drafting caused by tight sealing construction of the structure, air handling devices such as exhaust fans or forced air furnaces, or other causes; (5) use of fuels other than those specified in the Operating Instructions; (6) installation or use of components not supplied with the Appliance or any other components not expressly authorized and approved by HHT; and/or (7) modification of the Appliance not expressly authorized and approved by HHT in writing. This warranty is limited to only the component parts manufactured or supplied by HHT.
- B. HHT's liability under both the Limited Lifetime Warranty and the 1 Year Limited Warranty is limited to the replacement and repair of defective components or workmanship during the applicable period. HHT may fully discharge all of its obligations under such warranties by repairing the defective component(s) or at HHT's discretion, providing replacement parts at no charge and paying reasonable labor and freight costs.
- C. **EXCEPT TO THE EXTENT PROVIDED BY LAW, HHT MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY SPECIFIED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO DURATION OF THE WARRANTY SPECIFIED ABOVE.**
- D. Some states do not allow exclusions or limitations of incidental or consequential damages, so those limitations may not apply to you. This warranty gives you specific rights; you may also have other rights which vary from state to state.

### How to Obtain Service

To obtain service under this warranty you must:

1. Send written notice of the claimed condition to Heatilator Technical Service Department, Hearth & Home Technologies, 1915 W. Saunders Street, Mt. Pleasant, Iowa 52641-1563. You may also register your claim online at [www.heatilator.com/contact.asp](http://www.heatilator.com/contact.asp).
2. Provide proof of purchase, model number, serial number, and manufacturing date code to HHT.
3. Provide HHT reasonable opportunity to investigate the claim, including reasonable opportunity to inspect the Appliance prior to any repair or replacement work and before the Appliance or any component of the Appliance has been removed from the place of original installation.
4. Obtain HHT's consent to any warranty work before the work is done.

**ADDITIONAL INFORMATION:** If you would like information on current HEATILATOR products or want to locate a dealer in your area, call 1-800-843-2848.

©2003 Heatilator® is a Registered Trademark of Hearth & Home Technologies Inc.